

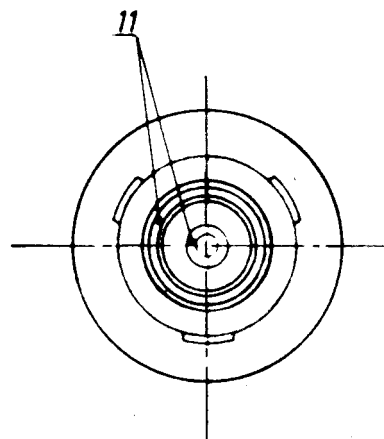


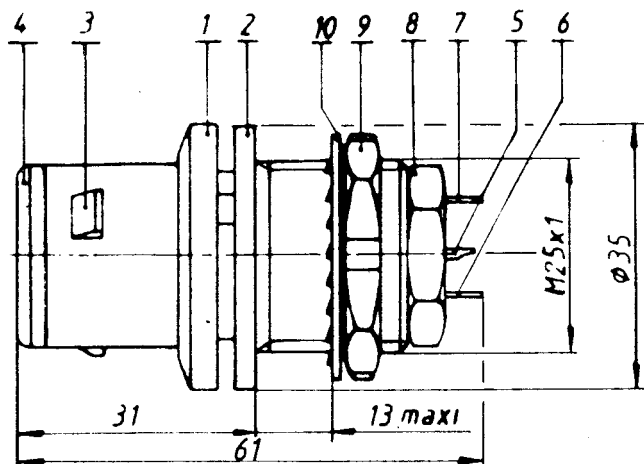


11	Insulators	PTFE	_____
10	Locking washer	Brass	Ni (3)
9	Nut	Brass	Ni (3)
8	Nut	Brass	Ni (3)
7	Earthing tag	Brass	Ni (3) - Au (2)
6	Male sleeve	Brass	Ni (3) - Au (1,5)
5	Male contact	Brass	Ni (3) - Au (1,5)
4	Inner sleeve	Brass	Ni (3)
3	Spring sleeve	Brass	Ni (3) - Cr (0,3)
2	Outer sleeve	Brass	Ni (3) - Cr (0,3)
1	Outer shell	Brass	Ni (3) - Cr (0,3)
N°	Specification	Material	Treatment (µm)

Cable assembly

Soldering with tin

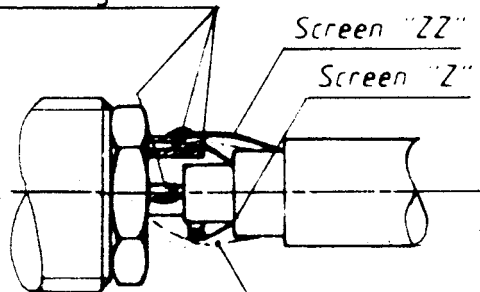


Panel
hole

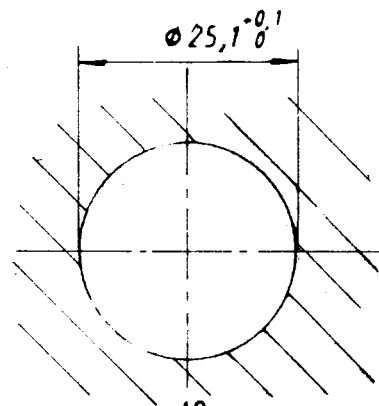

Heat-shrink tubing (optional)

Assembly instructions

- 1) Cut-out the panel according to the given dimensions
- 2) Mount the connector on the panel
- 3) Strip cable according to the given lengths
- 4) Introduce conductor into contact and sold
- 5) Twist screens "Z" and "ZZ" to opposite sides of the cable, introduce their tips into the slots of the tags, then sold.

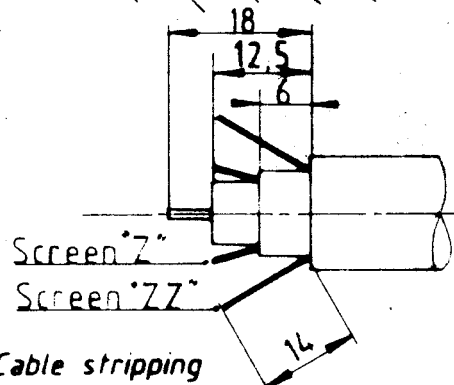

Straight plug
Nut fixing

Echelle

Dessine	08.05.90	MD
Contrôle	13.09.01	
V.		



1110 Morges



FBE.4E.675.CTA

01 1309010V.RM

Visa
Date
Pos

Visa
Date

Pos