


Outer shell	: Stainless steel (AISI 304L) -	
Latch sleeve	: Special brass	Chrome plated (FS-QQ-C-320B)
Inner shell	: Stainless steel (AISI 304L) -	
Collet nut	: Stainless steel (AISI 304L) -	
Insulator	: PEEK	-
Male contact	: Brass (UNS C34200)	Gold plated (ISO 27874)
Clip	: Cu-Be (UNS C17200)	-
Gland	: Silicone (SI)	-
Clip	: Stainless steel (AISI416)	-
Other metallic parts	: Brass (UNS C38500)	Nickel plated (FS-QQ-N-290A)

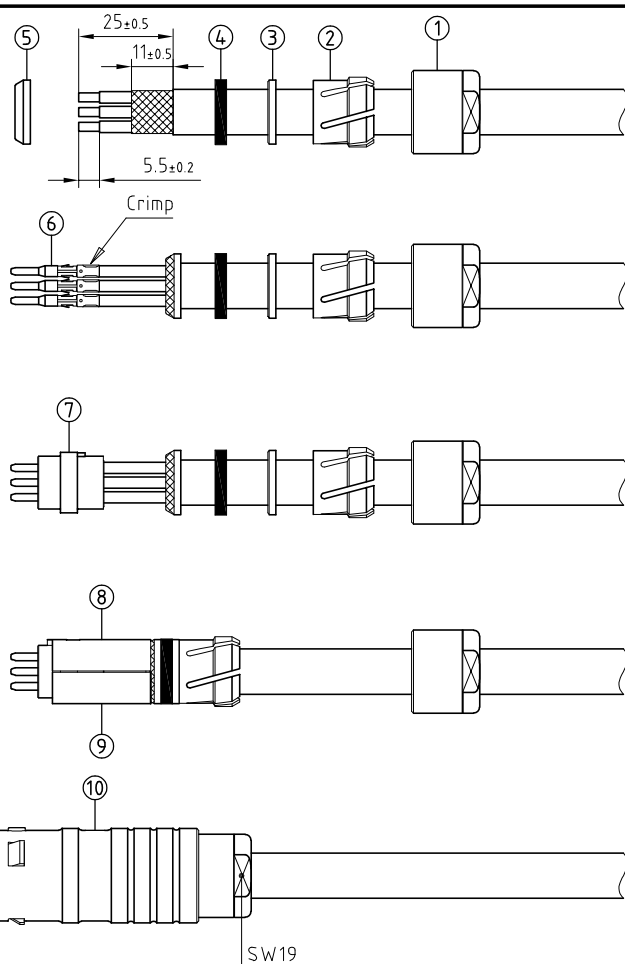

1. Strip the cable according to the given dimensions . (The end of the cable jacket must be cut properly) . Slide it into the collet nut①, the collet②, the ring③, the gland④and the earthing cone⑤.
2. In case of a screened cable , fold screen back over the extremity of the earthing cone . Fix the positioner on the crimping tool and set selector to the number corresponding to the conductor AWG as indicated on the positioner label . Fit conductor into the contacts⑥and make sure it is visible through its inspection hole in the crimp barrel . Open crimping tool then push contact fully into positioner and complete one crimping cycle . Remove from crimping tool and check that conductor is secure in contact and shows in inspection hole .
3. Slide contact-conductor combinations according to the insulator⑦marking avoiding twisting of the conductors . Fit the contacts gently into the insulator and verify that no conductors are crossed before pushing them in completely . Check that all contacts hold in the insulator by verifying their alignment at the front of the insulator and they should remain in position when each conductor is given a gentle pull .
4. Locate the slotted upper half⑧of the split insert carrier over the shoulder and key on the insulator then align and press together the other half⑨to form a complete cylinder . Push the earthing cone against the insert carriers whilst checking that the screen is being clamped around the whole circumference and cut , if necessary , the excess screen . Push the gland , the ring and collet against the earthing cone . Push the cable forward and verify that cable jacket is located under the gland .
5. Next slide the plug shell⑩over the insulator assembly making sure that the key on the insert carrier goes into the keyway (under the color point) inside the shell . Ensure that the internal components do not rotate in the shell and finally screw the collet nut with the appropriate tool and tighten to the maximum torque value of 5Nm .

Crimping tool	: DPC.91.101.A
Extractor	: DCC.91.202.5LA
Male contact	: FGG.4B.575.ZZC
Male positioner	: DCE.91.204.BVCM

**Straight plug , with key (G) , with cable collet ,  
and nut , with extended insulator .  
Series 4K , multiple (7)**

ETUDE N° E6041-E9225

Echelle	Dessiné	17.01.2019	OVU / NHA
	Contrôle	17.01.2019	NHA / ATVI
	Modif.	00	17.01.2019 / OVU



**LEMO**

LEMO SA  
Chemin des Champs-Courbes 28  
1024 Ecublens - SWITZERLAND

Tel. (+41 21) 695 16 00  
email : info@lemo.com  
www.lemo.com

**FGG.4K.307.SYCC\_\_**